

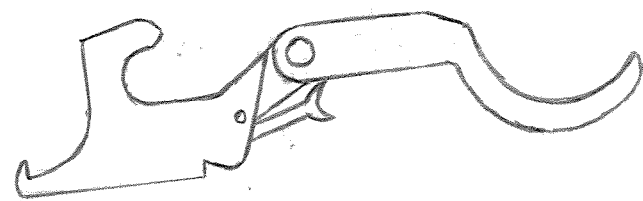



WELD IN PLACE HERE

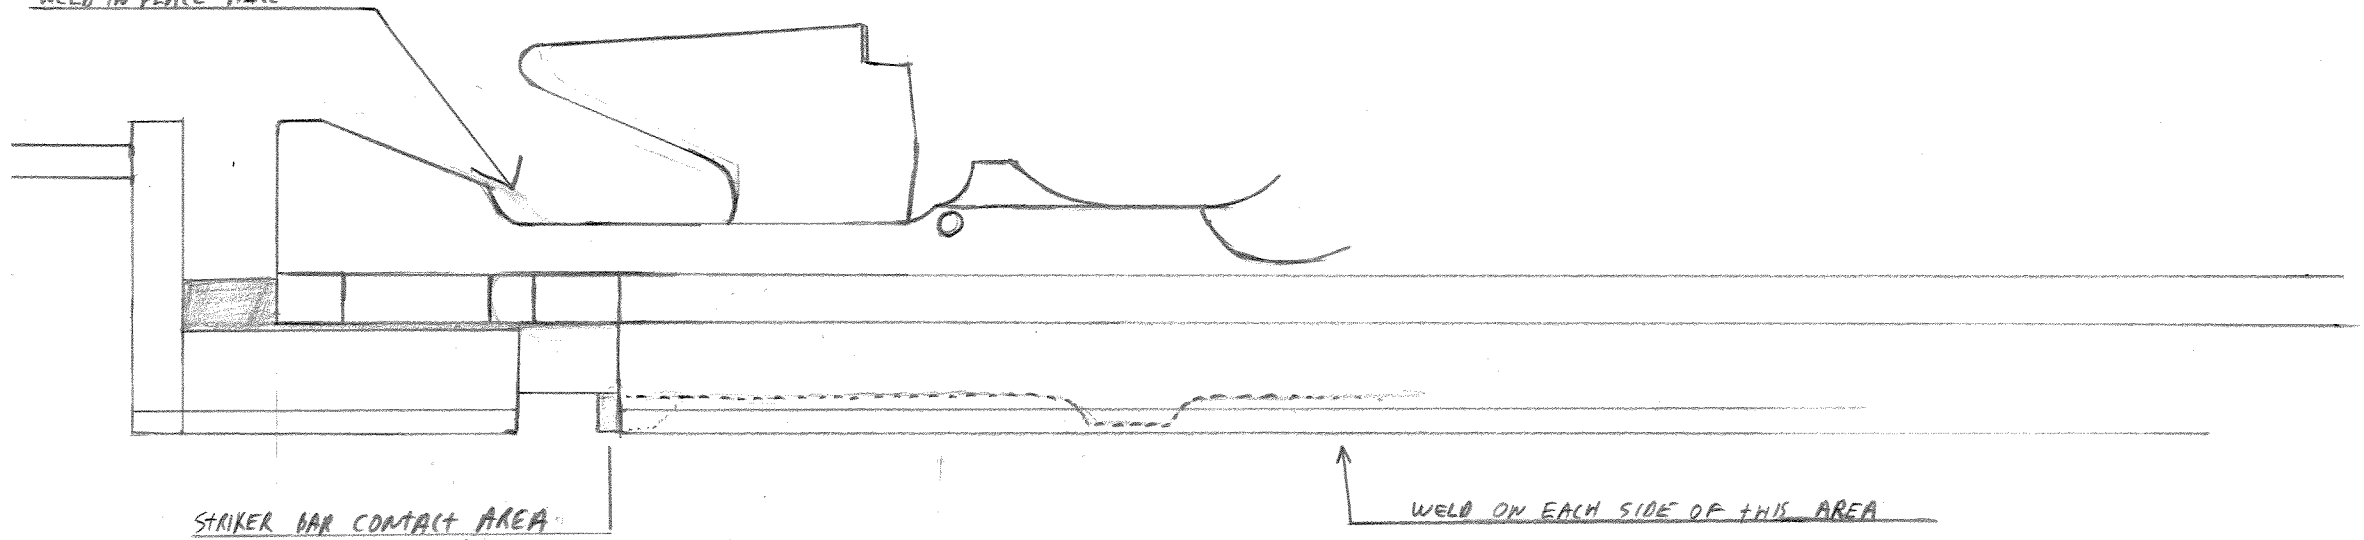


+AIM OFF FULL AUTO CATCH TRIGGER / DISCONNECTOR

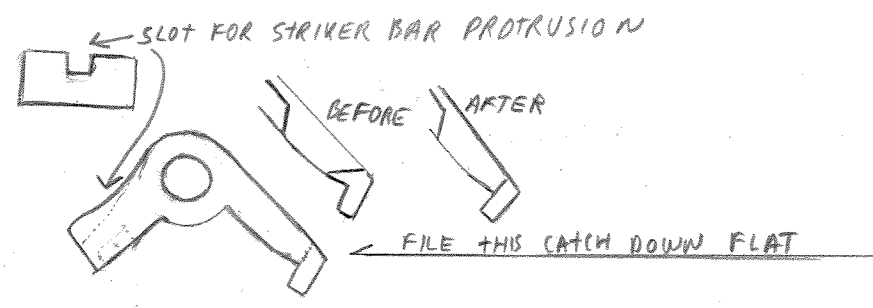

PLANE THIS SIDE DOWN 1/16" SEAR


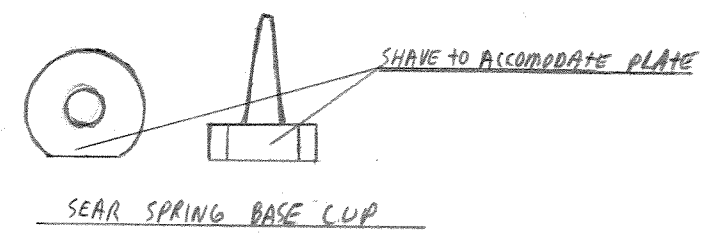


FILE THIS EDGE DOWN UNTILL THE TRIGGER IS IN SAFETY. THIS IS DONE AFTER YOU FINISH DOING THE COMPLETE TRIGGER MODS. REMOVE AND INSTALL UNTILL YOU GET IT RIGHT

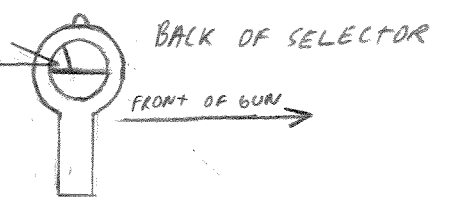

SELECTOR

DILL THESE HOLES IN THE RIGHT SIDE OF THE TRIGGER WORKING FOR ATTACHING THE PLATE

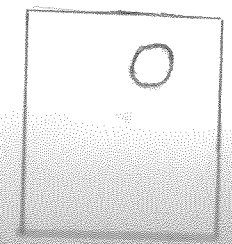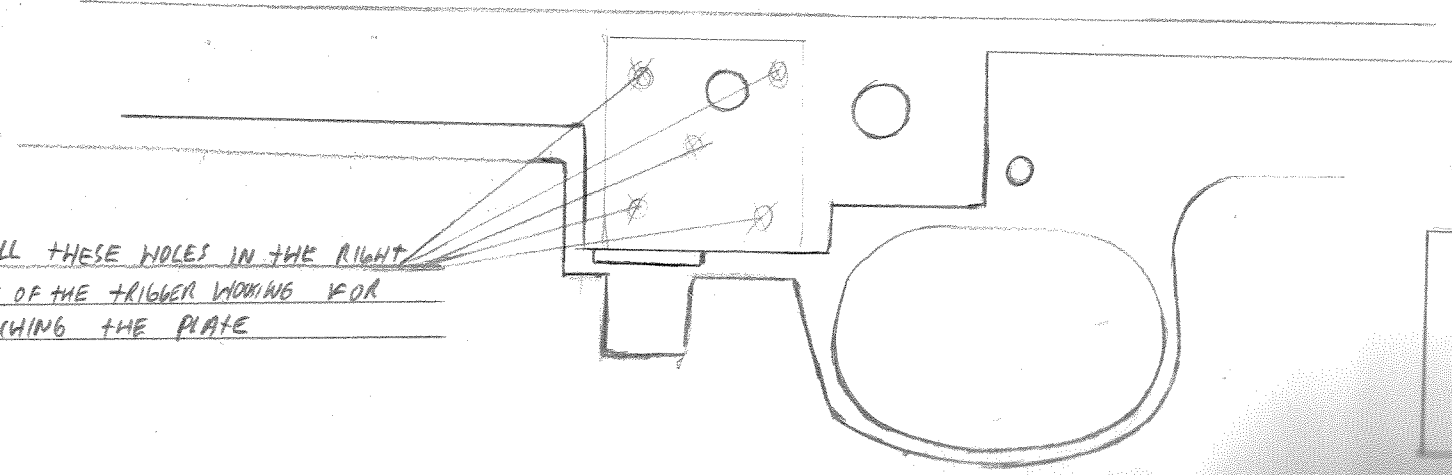

WELD IN PLATE, 1/16" THICK ATTACH TO INNER RIGHT SIDE